

Sr. No.	Operation	RECOMMENDED FREQUENCY								
		Servicing	1st	2nd	3rd	4th	5th	6th	7th	
		Kms	750	5000	10000	15000	20000	25000	30000	
1.	Servicing		✓	✓	✓	✓	✓	✓	✓	1st - 750 Kms / 30 Days 2nd onward @5000 Kms
2.	Engine idling speed / CO%	A	A	A	A	A	A	A	A	
3.	Valve tappet clearance	A	A	A	A	A	A	A	A	
4.	Engine oil* - Bajaj DTS-Si 10000	R	R		R		R		R	Replace at 10000 Kms*
5.	Oil strainer / Centrifugal filter	CL	CL		CL		CL		CL	Clean at 10000 Kms
6.	Engine oil filter / Paper oil filter	R	R	R	R	R	R	R	R	Replace at every service
7.	Spark plug functioning / Gap	C, A, R	C, A	C, A	C, A	R	C, A	C, A	R	Replace at every 15000 Kms
8.	Air cleaner element Clean / Replace **	CL, R	CL	CL	CL	R	CL	CL	R	Clean at every 5000 Kms Replace at every 15000 Kms
9.	Air filter cover 'O' Ring	R					R			Replace at every 20000 Kms
10.	Fuel cock sediment bowl cleaning	CL		CL	CL	CL	CL	CL	CL	
11.	Carburettor float bowl cleaning	CL			CL		CL		CL	Clean at every 10000 Kms
12.	Carburettor rubber duct	C, R	C	C	C	C	R	C	C	Replace at every 20000 kms
13.	Fuel pipes	C, R	C	C	C	C	R	C	C	Replace at every 20000 kms
14.	Battery electrolyte level	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	
15.	Clutch lever free play	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	
16.	Throttle grip play	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	
17.	Rear brake pedal free play	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	
18.	Brake lining or pad wear	CL, R		CL	CL	CL, R	CL	CL	CL, R	Replace at every 15000 kms
19.	Brake fluid level / Top up / Replace (If applicable)	C, A, R	C, A	C, A	C, A	C, A	C, A	C, A	R	Replace at every 30000 kms
20.	Master cylinder cup and dust seal (If applicable)	R							R	Replace at every 30000 kms
21.	Caliper piston seal and dust seal (If applicable)	R							R	Replace at every 30000 kms
22.	Brake hose pipe (If applicable)	C, R							C, R	Replace at every 30000 kms
23.	Brake cam & pedal pivot pin	L				L			L	
24.	Steering play	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	
25.	Steering stem bearing	C, L, R			C,L,R		C,L,R		C,L,R	
26.	All fasteners tightness	C, T	C, T	C, T	C, T	C, T	C, T	C, T	C, T	
27.	Rear sprocket fasteners	C, T	C, T	C, T	C, T	C, T	C, T	C, T	C, T	
28.	Rear wheel rubber shock damper	C, R			C, R		C, R		C, R	Replace at every 10000 kms
29.	Silencer drain hole cleaning	CL	CL	CL	CL	CL	CL	CL	CL	Clean at every 5000 Kms
30.	Cylinder head de-carbonising, valve lapping & Replace valve oil seals	CL				CL			CL	Clean at every 15000 Kms
31.	Engine air breather tube	R					R			Replace at every 20000 Kms
32.	Drive chain slackness adjustment & lubrication	C, A, L	C,A,L	C,A,L	C,A,L	C,A,L	C,A,L	C,A,L	C,A,L	Lubricate at every 500 kms. A- slackness whenever reqd.
33.	Drive chain remove, clean, insp. & lubricate (O/H)	CL, L			CL, L		CL, L		CL, L	At every 10000 Kms
34.	Drive chain link lock	R			R		R		R	Replace at every 10000 Kms
35.	Drive chain 'O' ring type (if applicable)	L	L	L	L	L	L	L	L	At every 500 Kms

Sr. No.	Operation	Servicing	RECOMMENDED FREQUENCY								
			1st	2nd	3rd	4th	5th	6th	7th		
			Kms	750	5000	10000	15000	20000	25000		30000
36.	Wheel bearing (for non sealed bearings only)	C, L						C, L			At every 20000 Kms
37.	Tyre tread wear (replace if worn out till TWI limit)	C, R			C, R	C, R	C, R	C, R	C, R	C, R	At every 5000 kms i.e. at every service after 2nd service
38.	Front fork oil	R						R			Replace at every 20000 Kms
36.	Thermal sensor & Auto choke functioning (If applicable)	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	At every 5000 Kms
40.	TPS (If applicable)	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	At every 5000 Kms
41.	Rear shock absorber- Check gas pressure (If applicable)	C, A						C, A			At every 20000 Kms.
42.	Starter clutch bush kit	CL, R					CL, R			CL, R	
43.	Clutch switch cleaning	CL			CL			CL		CL	
44.	General lubrication	L	L	L	L	L	L	L	L	L	
45.	Swing arm pivot pin lubrication	L						L			Lubricate at every 20000 Kms
46.	Engine foundation silent bush	R					R			R	Replace at every 15000 Kms

★★ :More frequent cleaning may be required when driving in dusty condition.

**A - Adjust • C - Check • CL - Clean • L - Lubricate • T - Tighten • R - Replace**

**Note :**

*Parts / Lubricants to be replaced as per Periodic Maintenance & Lubrication Chart are mandatory and the same are chargeable to customer.*

**Recommended Oil :**

“Bajaj DTS-Si 10000” a high performance engine oil developed by Bajaj auto..

Bajaj Auto recommends “Bajaj DTS-Si 10000” engine oil for 10,000 kms drain interval, better performance of engine components & warranty benefits.



Bajaj DTS-Si 10000	SAE 20W40 of API ‘SL’, JASO MA Grade.
Replacement Frequency*	1st replacement at 750 Kms. / 1st service. Thereafter at every 10,000 Kms.
Recommended Quantity	Drain & Refill 1000 ml., Engine Overhaul 1100 ml.
*For any other branded oil of equivalent grade replacement frequency will be 5000 Kms.	

**⚠ CAUTION :**

- It is most important to adhere to recommended grade & frequency of oil change for the purpose of long life of critical engine components.
- Do not reuse drained oil.